


3. Pull the door away and down to remove.

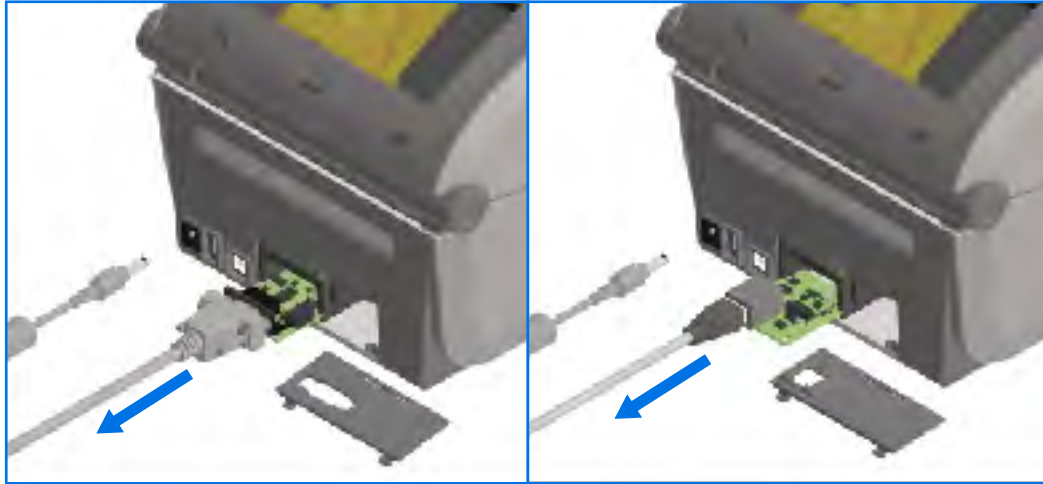

4. Reattach the interface cable to the connectivity module and secure the cable.
5. Gently pull on the interface cable that is secured to the connectivity module, then slowly pull the module out of the printer.
6. Install a different connectivity module or reinstall the connectivity module's access door as required. Align it to the bottom lip of the access opening and swing it up to snap and lock in place.

Installing the Wireless Connectivity Module

The wireless connectivity module provides Wi-Fi connectivity for the printer. Install it to allow your printer to connect to Wi-Fi networks.



CAUTION: The discharge of electrostatic energy that accumulates on the surface of the human body or other surfaces can damage or destroy the printhead or electronic components used in this device. You must observe static-safe procedures when working with the printhead or the electronic components.

No tools are needed to perform this procedure.

To prepare for the installation, remove any loaded media, turn the printer power **OFF**, and disconnect any power or interface cables from the printer.

1. Turn the printer over to access the wireless connectivity door located at the bottom of the printer.
2. Push the latch at the top with your fingertip to open the module access door. The printer base has a recessed area for your fingertip.

The latch releases.


3. Lift and swing the door up to remove it.



4. Align the antenna arm and lower the module.



NOTE: Ensure the printer's Wi-Fi connector aligns with the module's connectors.

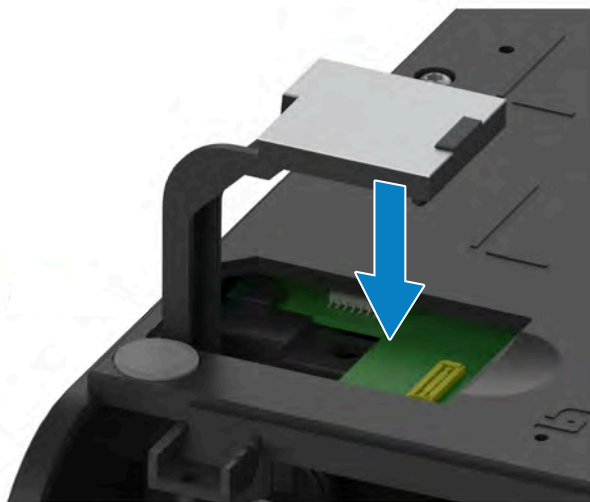

5. Push the module in gently but firmly until fully seated.
6. Align the shortest side of the wireless connectivity door to the shortest side of the opening.

7. Swing the door closed and push down to lock the latch.




8. Place the compliance label that shipped with the module on the bottom of the printer.
- The compliance label has the appropriate regulatory marks needed to use the printer in your country.

Figure 3 Label Locations for Thermal Transfer Printers



1	Location for the label	2	Label affixed
---	------------------------	---	---------------

Figure 4 Label Locations for Direct Thermal Printers

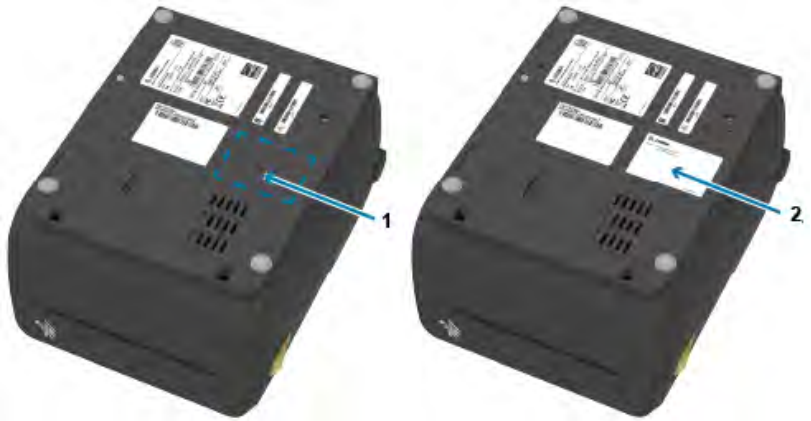

1	Location for the label	2	Label affixed
---	------------------------	---	---------------

After all hardware upgrade kits are added, reconnect the printer's power and interface cables.



NOTE: We recommend that you update the printer firmware to verify the printer and wireless module have the same, latest version. Go to [Updating Printer Firmware](#) for firmware update instructions.