
## Label Loading Instruction




Ready to load



Pass labels through the label path as Shown.

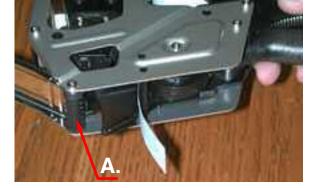

Note: When threading the labels do not pass them through the roller A.

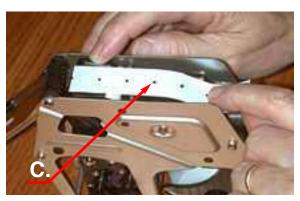

Fold labels back over and align holes in the labels with pins on the sprocket C.



Close the bottom cover. (Label waste is dispensed between the handles.) Your price-marker is now loaded and ready for action!



Pull down on the forwardpart of the printbase. This will open the path for the labels to pass through



Pass labels through the slot in the printbase B.



e-mail: export@towa-ltd.co.jp

Tel: +81-3-3572-9621